


Einbau Fensterelemente




00-EF-01




4 x B105-030
30mm

2 x B105-030 + 4 x B105-050
30mm 50mm

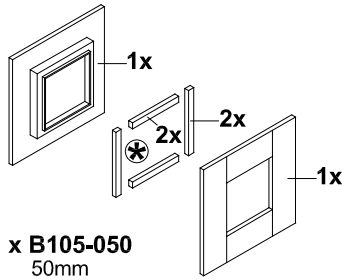


00-EF-02




6 x B105-030
30mm

4 x B105-030 + 4 x B105-050
30mm 50mm




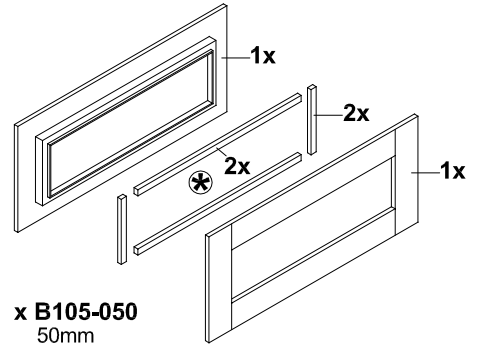


00-EF-01

1.

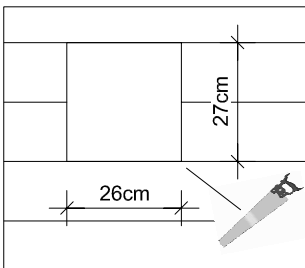


2.

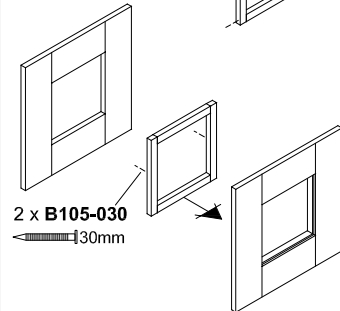
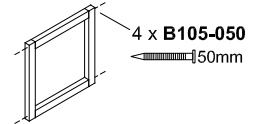

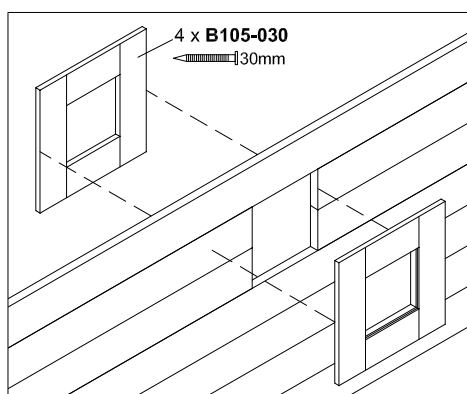


00-EF-02


1.

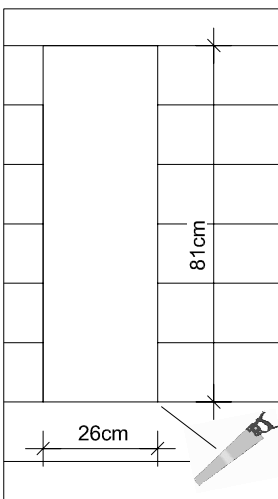


2.

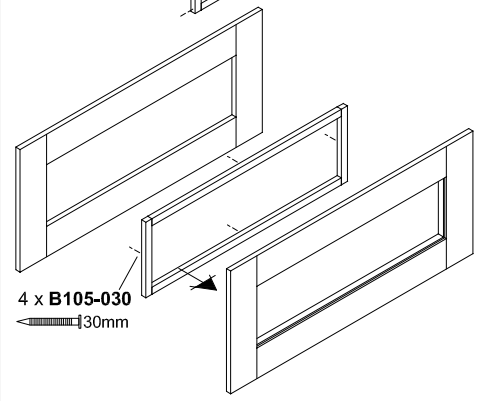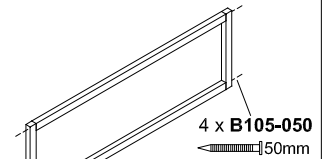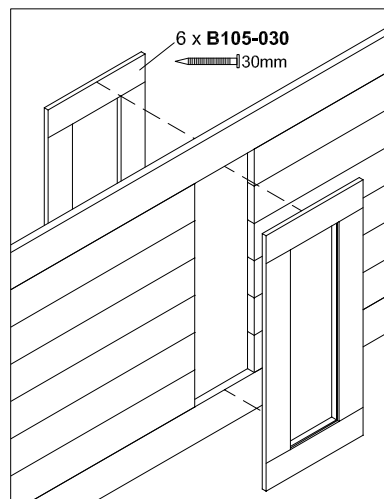

1.

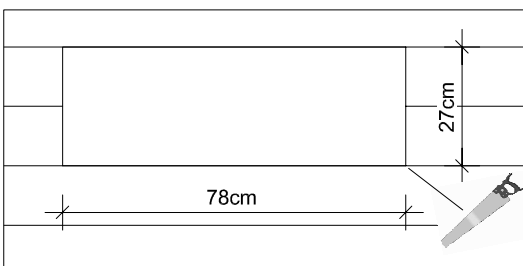

2.

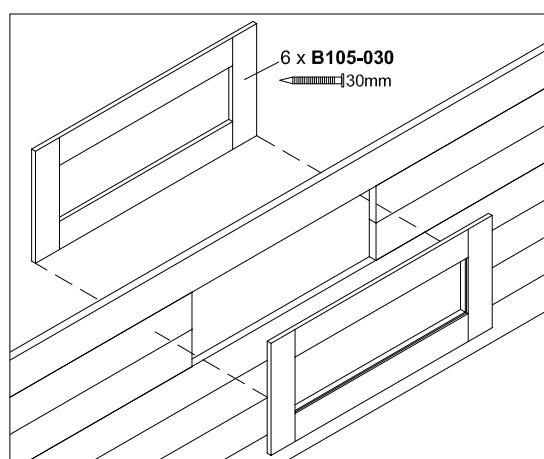

**Der Fenster-
rahmen darf
nicht mit den
Blockbohlen
verbunden
werden!**